



16000 W. 108th St. Lenexa, KS 66219 | arrowmhp.com | 800.821.7563

ADJUSTABLE FORK SPREADER ASSEMBLY INSTRUCTIONS

WATCH INSTRUCTION VIDEO - CLICK HERE




OR SCAN HERE



Installing fork pockets

Refer to photo below when installing fork pockets for correct orientation of pockets and fasteners.

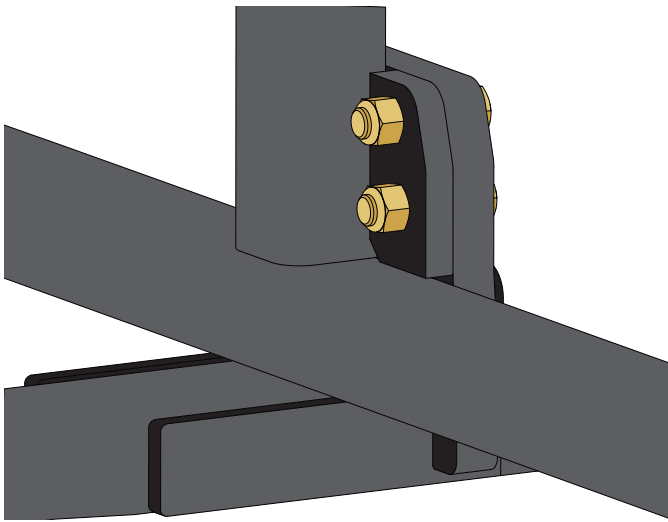

1. When installing fork pockets, ensure the vertical plate of the fork pocket is sitting behind the frame of the spreader and the pocket itself is sitting under the frame.
2. Rest the spreader frame on the pockets and install fasteners from the back of the fork pocket through the front of the frame.
3. Loosely install nuts.
4. Ensure there is no gap between the pockets and the lower frame tube before tightening fasteners.
5. Once pockets and fasteners are in correct position, torque the fasteners to the required spec. 700 ft-lb lubricated or 900 ft-lb dry.

Installing outer forks

1. To install outer forks, remove bolts securing the shaft retainer in place and remove shaft retainer.
2. Once retainer is removed, remove the shaft from the frame.
3. With the shaft removed, move outer fork into position and slide shaft through the eye of the fork.
4. Slide the shaft completely through the frame until shaft hits the welded retainer on the inner support plate.
5. With the shaft completely in place, place the outer shaft retainer in place and install bolts and torque to spec. 35 ft-lb lubricated or 45 ft-lb dry.